


COOKOLOGY

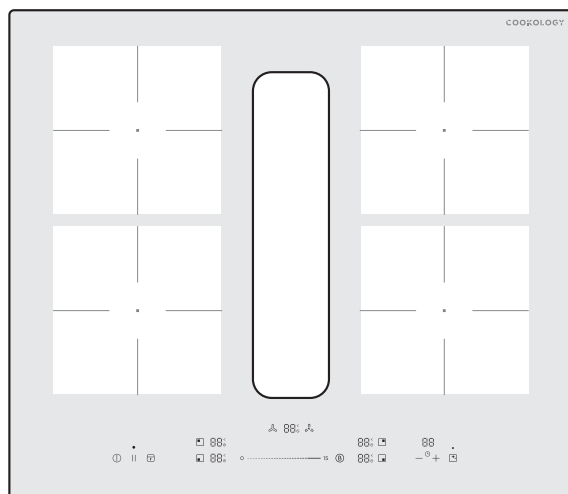

60CM VENTED INDUCTION HOB INSTALLATION MANUAL

CIDDVEN600

Please register the warranty for this product on www.Cookology.com

Warning notices: Before using this product, Please read this manual thoroughly to ensure you know how to operate the features. And functions that your new appliance offers in a safe way. The design and specifications are subject to change without prior notice for product improvement.

Consult with your dealer or manufacturer for details.

The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing **Cookology**! Before using your new **Cookology** product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS







THANK YOU LETTER	0 1
SAFETY INSTRUCTIONS	0 2
SPECIFICATIONS	1 0
PRODUCT OVERVIEW	1 3
QUICK START GUIDE	1 5
OPERATION INSTRUCTIONS	1 7
CLEANING AND MAINTENANCE	2 7
TROUBLESHOOTING	3 3
PRODUCT INSTALLATION	3 6
DISPOSAL AND RECYCLING	5 5
DATA PROTECTION NOTICE	5 6

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols

	Danger This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.
	Warning of electrical voltage This symbol indicates that there is a danger to life and health of persons due to voltage.
	Warning This symbol indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.
	Caution This symbol indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	Attention This symbol indicates important information (e.g. damage to property), but not danger.
	Observe instructions This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

Safety Warnings

Your safety is important to us. Please read this information before using your cooktop. Please strictly observe the instructions in this manual. No liability will be assumed for any problems, damage or fires caused by failure to comply with the instructions in this manual. The device is intended for domestic use only, to cook food and extract the fumes generated by cooking. No other use is allowed (e.g. heating rooms). The manufacturer declines any liability for inappropriate use or incorrect setting of the controls.

The product may have different aesthetic features with respect to the illustrations in this handbook, however the operating, maintenance and installation instructions remain the same.

This manual must be stored for future consultation at any time. If sold, transferred or moved, it must remain with the product.

Installation

Electrical Shock Hazard

- Disconnect the appliance from the mains electricity supply before carrying out any work or maintenance on it.
- Connection to a good earth wiring system is essential and mandatory.
- Alterations to the domestic wiring system must only be made by a qualified electrician.
- Failure to follow this advice may result in electrical shock or death.
- -Installation or maintenance must be performed by a qualified technician, in compliance with the manufacturer's instructions and with local safety regulations. Do not repair or replace any part of the device unless specifically stated in the operating manual.
- Earthing the device is compulsory.
- The power cable must be long enough ,to allow the device, built-in to the cabinet, to be connected to the electrical network.
- In order to ensure the installation complies with current safety standards, a regular omnipolar switch is required that assures the complete disconnection of the mains under category III over-voltage conditions, in accordance with the installation rules.
- Do not use multiple sockets or extension cords. -Once installation is complete, the electrical components must no longer be accessible by the user.

- Before connecting the device to the electrical network: check the data plate (on the bottom of the device) to ensure that the voltage and power correspond to the network values and that the connection socket is suitable. If in doubt, consult a qualified electrician.

Cut Hazard

- Take care - panel edges are sharp.
- Failure to use caution could result in injury or cuts.

Important Safety Instructions

- Read these instructions carefully before installing or using this appliance.
- No combustible material or products should be placed on this appliance at any time.
- Please make this information available to the person responsible for installing the appliance as it could reduce your installation costs.
- In order to avoid a hazard, this appliance must be installed according to these instructions for installation.
- This appliance is to be properly installed and earthed only by a suitably qualified person.
- This appliance should be connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.
- Failure to install the appliance correctly could invalidate any warranty or liability claims.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Warning: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock, for hob surfaces of glass-ceramic or similar material which protect live parts
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot
- A steam cleaner is not to be used.
- Do not use a steam cleaner to clean your cooktop.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- WARNING: Danger of fire: do not store items on the cooking surfaces.
- The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. **NEVER** try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- After use, switch off the hob from its control device and do not rely on the pot detector.
- Avoid spills; when boiling or heating liquids, lower the heat supply.
- Do not leave the heating elements on with pots and pans empty or without containers.
- Once cooking is complete, turn off the relative zone.
- Never use aluminium foil to cook with, and never directly place products packaged with aluminium on top of the cooking surface. The aluminium would melt and irreparably damage your device.
- Never heat a tin or a tin can containing foods without first opening it: it might explode!

Operation and Maintenance

Electrical Shock Hazard

- Do not cook on a broken or cracked cooktop. If the cooktop surface should break or crack, switch the appliance off immediately at the mains power supply (wall switch) and contact a qualified technician.
- Switch the cooktop off at the wall before cleaning or maintenance.
- Failure to follow this advice may result in electrical shock or death.

Health Hazard

- This appliance complies with electromagnetic safety standards.
- However, persons with cardiac pacemakers or other electrical implants (such as insulin pumps) must consult with their doctor or implant manufacturer before using this appliance to make sure that their implants will not be affected by the electromagnetic field.
- Failure to follow this advice may result in death.

Hot Surface Hazard

- During use, accessible parts of this appliance will become hot enough to cause burns.
- Do not let your body, clothing or any item other than suitable cookware contact the Induction glass until the surface is cool.
- Keep children away.
- Handles of saucepans may be hot to touch. Check saucepan handles do not overhang other cooking zones that are on. Keep handles out of reach of children.
- Failure to follow this advice could result in burns and scalds.

Cut Hazard

- The razor-sharp blade of a cooktop scraper is exposed when the safety cover is retracted. Use with extreme care and always store safely and out of reach of children.
- Failure to use caution could result in injury or cuts.

Important Safety Instructions

- Never leave the appliance unattended when in use. Boilover causes smoking and greasy spillovers that may ignite.
- Never use your appliance as a work or storage surface.
- Never leave any objects or utensils on the appliance.
- Do not place or leave any magnetisable objects (e.g. credit cards, memory cards) or electronic devices (e.g. computers, MP3 players) near the appliance, as they may be affected by its electromagnetic field.
- Never use your appliance for warming or heating the room.
- After use, always turn off the cooking zones and the cooktop as described in this manual (i.e. by using the touch controls). Do not rely on the pan detection feature to turn off the cooking zones when you remove the pans.
- Do not allow children to play with the appliance or sit, stand, or climb on it.
- Children should not use this appliance.

- Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be done by a qualified technician.
- Do not place or drop heavy objects on your cooktop.
- Do not stand on your cooktop.
- Do not use pans with jagged edges or drag pans across the Induction glass surface as this can scratch the glass.
- Do not use scourers or any other harsh abrasive cleaning agents to clean your cooktop, as these can scratch the Induction glass.
- This appliance is intended to be used in household and similar applications such as: -staff kitchen areas in shops, offices and other working environments; -farm houses; -by clients in hotels, motels and other residential type environments; -bed and breakfast type environments.
- **WARNING:** The appliance and its accessible parts become hot during use.
- Care should be taken to avoid touching heating elements.
- Children less than 8 years of age shall be kept away unless continuously supervised.
- The room must be properly ventilated when the cooker extractor is used at the same time as other combustion devices, gas or otherwise.
- The extractor must be regularly cleaned both internally and externally (**AT LEAST ONCE PER MONTH**), in strict accordance with the maintenance instructions.
- Failure to follow the rules for extractor cleaning and filter replacement and cleaning shall result in a fire hazard.
- It is strictly prohibited to flame food. The use of an open flame may damage the filters and cause a fire hazard; it must therefore be avoided under all circumstances. Extra care must be taken when frying to prevent the oil from overheating and catching fire.
- **CAUTION:** When the hob is on, the accessible parts of the extractor may become hot.
- In regards to the technical and safety measures that must be adopted for fume extraction, regulations issued by local authorities must be strictly followed.
- The extracted air must not be conveyed through the same ducts used to extract the fumes generated by gas combustion or other types of combustion devices. Never use the extractor unless the grill has been correctly assembled!
- Use only the fastening screws supplied with the product for its installation, or if not supplied, purchase the correct type of screws. Use screws with the right length, as indicated in the installation guide.

- Recommendations for correct use in order to reduce the impact on the environment: When starting to cook, turn on the LEAST at minimum speed and leave it on for a few minutes even after cooking is complete. Increase the speed only if there is a large amount of fumes and steam, using the Booster function only in extreme cases. To keep the odour reduction system running efficiently, replace the carbon filter/s when necessary.
- To ensure the high performance of the grease filter, clean it when necessary. To improve efficiency and minimise noise, use the maximum ducting diameter indicated in this manual.
- Leaving fat or oil cooking on an unattended hob can be dangerous and may lead to fires.
- Never leave hot oil or fat unattended.
- Never operate the appliance without grease filter.
- Never work with naked flames close to the appliance (e.g. flambéing) around the grease filters.
- Do not install the appliance near a solid fuel heating appliance (e.g. wood- or coal-burning) unless the heating appliance has a sealed, non-removable cover. There must be no flying sparks.
- Allow the appliance to cool down before cleaning.
- If hot liquids penetrate the appliance, only remove the grease filter or the overflow container once the appliance has cooled down.
- There is a slight odor when unpacking, and it will soon disappear.
- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions [RY1] for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

- there is a fire risk if cleaning is not carried out in accordance with the instructions
- CAUTION: Accessible parts may become hot when used with cooking appliances.
- regulations concerning the discharge of air have to be fulfilled.
- CAUTION: This appliance is not intended to be used with gas hobs.

Congratulations on the purchase of your new Induction Hob.

We recommend that you spend some time to read this Instruction / Installation Manual in order to fully understand how to install correctly and operate it.

For installation, please read the installation section.

Read all the safety instructions carefully before use and keep this Instruction / Installation Manual for future reference.

SPECIFICATIONS

Cooking Hob	CIDDEVN600
Cooking Zones	4 Zones
Supply Voltage	220-240V~ 50Hz or 60Hz
Installed Electric Power	7400W
Product Size W ×D×H(mm)	600X520X236
Building-in Dimensions A ×B (mm)	560X480
Motor	BLDC

	Symbol	Value	Unit
Type of hob	Electric hob		
Number of cooking zone	Four zones		
Heating technology	Induction cooking		
Diameter of useful surface for cooking zone Ø	Left front	180	mm
Diameter of useful surface for cooking zone Ø	Left rear	180	mm
Diameter of useful surface for cooking zone Ø	Right front	180	mm
Diameter of useful surface for cooking zone Ø	Right rear	180	mm
Energy consumption per cooking zone or area	EC electric cooking	Left front : 190.3 Left rear : 185.4 Right front : 196.6 Right rear : 197.6	Wh/kg
Energy consumption for the hob	EC electric hob	192.5	Wh/kg
Energy consumption			
Annual energy consumption	AEEhood	12.6	kWh/a
Energy efficiency class	-	A++	-
Energy efficiency index	EElhood	34.6	-
Fluid dynamic efficiency	FDEhood	31.1	-
Fluid dynamic efficiency class	-	A	-

Lighting			
Lighting efficiency	LEhood	N/A	lux/W
Lighting efficiency class	-	N/A	-
Grease filtering			
Grease filtering efficiency	GFEhood	90.8	%
Grease filtering efficiency class	-	B	-
Air flow volume (ducted extraction)			
Maximum air flow at lowest setting in normal use	-	245.3	m ³ /h
Maximum air flow at 8 th speed setting in normal use	-	388.8	m ³ /h
Maximum air flow at highest setting in normal use	-	512.8	m ³ /h
Maximum air flow at boost setting in normal use	-	638.4	m ³ /h
Noise(ducted extraction)			
Airborne acoustical A-weighted sound power emissions at lowest setting	-	45	dB
Airborne acoustical A-weighted sound power emissions at 8 th speed setting	-	54	dB
Airborne acoustical A-weighted sound power emissions at highest setting	-	61	dB
Airborne acoustical A-weighted sound power emissions at boost setting	-	65	dB
Power consumption			
Power consumption in off mode	PO	0.4	W
Power consumption in standby mode	PS	N/A	W
Air flow volume (recirculated extraction)			
Maximum air flow at lowest setting	-	261.7	m ³ /h
Maximum air flow at 8 th speed setting	-	370.2	m ³ /h
Maximum air flow at highest setting	-	464.0	m ³ /h
Maximum air flow at boost setting	-	496.6	m ³ /h

Noise(recirculated extraction)			
Airborne acoustical A-weighted sound power emissions at lowest setting	-	52	dB
Airborne acoustical A-weighted sound power emissions 8 th speed setting	-	58	dB
Airborne acoustical A-weighted sound power emissions at highest setting	-	63	dB
Airborne acoustical A-weighted sound power emissions at boost setting	-	64	dB

Weight and Dimensions are approximate. Because we continually strive to improve our products we may change specifications and designs without prior notice.

If there is no any operation after switch on the hob, the hob will reach automatically the off mode after 1 minute and the power is 0.5W in off mode.


Pan Dimension

The cooking zones are, up to a limit, automatically adapted to the diameter of the pan. However the bottom of this pan must have a minimum of diameter according to the corresponding cooking zone. To obtain the best efficiency of your hob, please place the pan in the centre of the cooking zone.

Cooking zone	The base diameter of induction cookware	
	Minimum (mm)	Maximum (mm)
180	140	180


NOTE

- The use of small POTS needs to be placed in a central area for cooking ;
- Using a bad pan requires a larger size for heating.

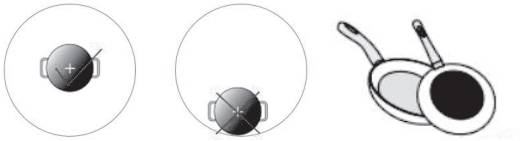


PRODUCT OVERVIEW

Top View

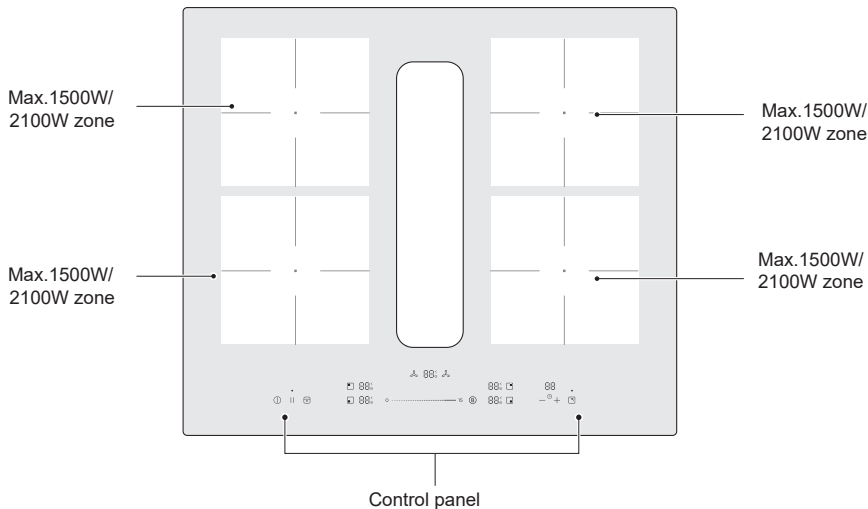

Top View

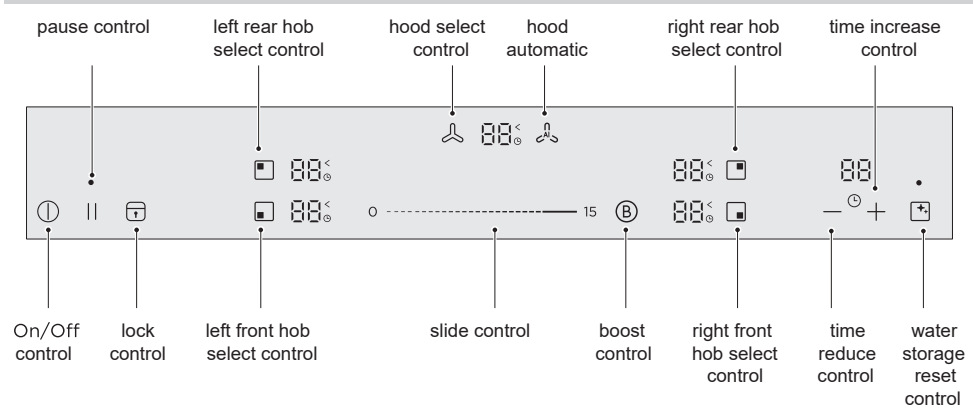


NOTE

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

Working Theory

Induction cooking is a safe, advanced, efficient, and economical cooking technology. It works by electromagnetic vibrations generating heat directly in the pan, rather than indirectly through heating the glass surface. The glass becomes hot only because the pan eventually warms it up.

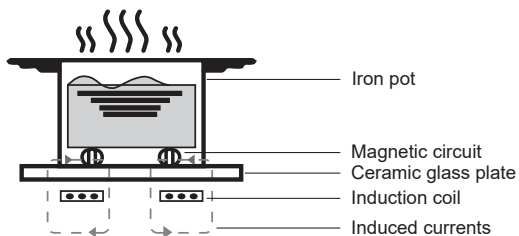

Before Using Your New Induction Hob And Hood

- Read this guide, taking special note of the 'Safety Warnings' section.
- Remove any protective film that may still be on your Induction hob.

Operating Mode

You can use your appliance in air extraction mode or circulating-air mode.

Air extraction mode

The air which is drawn in is cleaned by the grease filters and conveyed to the exterior by a pipe system.



Air recirculation mode


The air which is drawn in is cleaned by the grease filters and an odour filter, and conveyed back into the room.



The factory default mode is air extraction mode. You can perform the following steps to switch modes as required.

Refer to the user menu settings function and enter the h1 option for setting according to the actual situation.

QUICK START GUIDE

-  Take care when frying as the oil and fat heat up very quickly, particularly if you're using. Power Boost. At extremely high temperatures oil and fat will ignite spontaneously and this presents a serious fire risk.

Cooking Tips

- When food comes to the boil, reduce the temperature setting.
- Using a lid will reduce cooking times and save energy by retaining the heat.
- Minimize the amount of liquid or fat to reduce cooking times.
- Start cooking on a high setting and reduce the setting when the food has heated through.

Simmering, cooking rice

- Simmering occurs below boiling point, at around 85°C, when bubbles are just rising occasionally to the surface of the cooking liquid. It is the key to delicious soups and tender stews because the flavours develop without overcooking the food. You should also cook egg-based and flour thickened sauces below boiling point.
- Some tasks, including cooking rice by the absorption method, may require a setting higher than the lowest setting to ensure the food is cooked properly in the time recommended.

Searing steak

To cook juicy flavoursome steaks:

1. Stand the meat at room temperature for about 20 minutes before cooking.
2. Heat up a heavy-based frying pan.
3. Brush both sides of the steak with oil. Drizzle a small amount of oil into the hot pan and then lower the meat onto the hot pan.
4. Turn the steak only once during cooking. The exact cooking time will depend on the thickness of the steak and how cooked you want it. Times may vary from about 2 – 8 minutes per side. Press the steak to gauge how cooked it is – the firmer it feels the more 'well done' it will be.
5. Leave the steak to rest on a warm plate for a few minutes to allow it to relax and become tender before serving.

For Stir-frying

1. Choose an induction compatible flat-based wok or a large frying pan.
2. Have all the ingredients and equipment ready. Stir-frying should be quick. If cooking large quantities, cook the food in several smaller batches.
3. Preheat the pan briefly and add two tablespoons of oil.
4. Cook any meat first, put it aside and keep warm.
5. Stir-fry the vegetables. When they are hot but still crisp, turn the cooking zone to a lower setting, return the meat to the pan and add your sauce.
6. Stir the ingredients gently to make sure they are heated through.
7. Serve immediately.

Detection of Small Articles

When an unsuitable size or non-magnetic pan (e.g. aluminium), or some other small item (e.g. knife, fork, key) has been left on the hob.

Heat Settings


The settings below are guidelines only. The exact setting will depend on several factors, including your cookware and the amount you are cooking. Experiment with the induction hob to find the settings that best suit you.

Heat setting	Suitability
1 - 2	<ul style="list-style-type: none">• delicate warming for small amounts of food• melting chocolate, butter, and foods that burn quickly• gentle simmering• slow warming
3 - 5	<ul style="list-style-type: none">• reheating• rapid simmering• cooking rice
6 - 11	<ul style="list-style-type: none">• pancakes
12 - 14	<ul style="list-style-type: none">• fried• cooking pasta
15 / P	<ul style="list-style-type: none">• stir-frying• searing• bringing soup to the boil• boiling water


OPERATION INSTRUCTIONS

Touch Controls

- The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

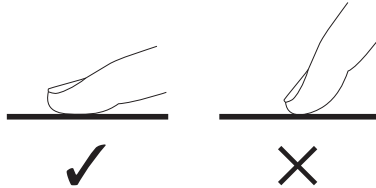

Choosing the Right Cookware

 
- ⚠ • Only use cookware with a base suitable for induction cooking. Look for the induction symbol on the packaging or on the bottom of the pan.
- You can check whether your cookware is suitable by carrying out a magnet test. Move a magnet towards the base of the pan. If it is attracted, the pan is suitable for induction.
- If you do not have a magnet:
 1. Put some water in the pan you want to check.
 2. If  does not flash in the display and the water is heating, the pan is suitable.




- Cookware made from the following materials is not suitable: pure stainless steel, aluminium or copper without a magnetic base, glass, wood, porcelain, ceramic, and earthenware. • If the ferromagnetic part covers only partially the base of the pan, only the ferromagnetic area will heat up, the rest of the base may not heat up a sufficient temperature for cooking.
- If the ferromagnetic area is not homogeneous, but presents others material such as aluminum th may affect the heating up and the pan detection.
- If the base of the pan is similar to the pictures below the pan may not detected.




- Do not use cookware with jagged edges or a curved base.



- Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Use pans whose diameter is as large as the graphic of the zone selected. Using a pot a slightly wider energy will be used at its maximum efficiency. If you use smaller pot efficiency could be less than expected. Pot too small could be undetected by the hob. Always centre your pan on the cooking zone.

 

 
- Always lift pans off the Induction hob – do not slide, or they may scratch the glass.




How to Use

1. Start Cooking

 1. Long press the ON/OFF control. After power on, the buzzer beeps once, all displays show “—” or “— —”, indicating that the induction hob has entered the state of power on mode.
Note: In power on mode, it automatically enters standby mode after 20 seconds of no button operation.



2. Place a suitable pan on the cooking zone that you wish to use.
 - Make sure the bottom of the pan and the surface of the cooking zone are clean and dry.

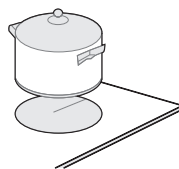


3. Touch the selection key to turn on the hob.



4. Slide the slider to set the gear.
After the hob is running, the hood automatically enters the automatic mode and the hood digital display shows A.



5. The timer can be set by using the '+' or '-' buttons.

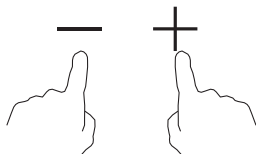

If the display flashes $\geq \underline{\quad} \leq$ alternately with the heat setting

This means that:

- you have not placed a pan on the correct cooking zone or,
- the pan you're using is not suitable for induction cooking or,
- the pan is too small or not properly centered on the cooking zone.

 
 
No heating takes place unless there is a suitable pan on the cooking zone.

The display " $\underline{\quad}$ " will automatically disappear after 1 minute if no suitable pan is placed on it.

2. Finish Cooking


1. Slide the slider to set the gear to 0.

2. Turn the whole cooktop off by touching the ON/OFF control.



3. Beware of hot surfaces

 
H/h will show which cooking zone is hot to touch. It will disappear when the surface has cooled down to a safe temperature. It can also be used as an energy saving function if you want to heat further pans, use the hotplate that is still hot.



3. Locking the Controls

- Long-term child lock:
You can lock the controls to prevent unintended use (for example children accidentally turning the cooking zones on).
In power on state , when the controls are locked, all the controls except the ON/OFF control and UNLOCK control are disabled .
- Temporary child lock:
Clean the operating area during cooking.

To lock the controls	
In heating mode , short press the lock control to enter temporary child lock state.	Hob indicator will show “Lo” for some times The time indicator will display a 30 second countdown.
Long press the lock control for 3 second to enter long-term child lock state.	All indicator will show “Lo” for some times.
To unlock the controls	
In temporary child lock state, short press the lock control to remove temporary child locks. In temporary child lock state, remove the child lock after the countdown to 0.	
In long-term child lock state, touch and hold the lock control for 3 second to remove long-term child locks.	

-  When the hob is in the long-term lock heating mode, all the controls are disable except the ON/OFF and LOCK control, you can always turn the induction hob off with the ON/OFF control in an emergency.
- When in long-term child lock shutdown mode, the digital display will prompt “Lo” after turning on, and the child lock needs to be released before opening the hob.
- Temporary child lock can only be entered while working.

4. Timer control

You can set it to turn one or more cooking zones off after the set time is up.
The timer of maximum is 99 min.
The timer of default value is 1 min.

Set one zone


The time can be set only after the hob or hood is running.

Set the time by touching timer ‘+’ or ‘-’ control.

Touch the “-” or “+” control of the timer once will decrease or increase by 1 minute.

Touch and hold the “-” or “+” control of the timer will decrease or increase by 10 minutes.

Touching the “-” and “+” together for 1s, the time is cancelled.

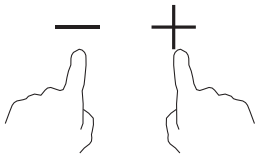

5. Pause control

You can enter pause mode only when the hob is running.
After entering pause mode, hob and hood enter the lowest gear for operation.

enter pause
In heating mode , touch the pause control to enter pause state In pause mode, the digital display shows or .
Remove pause
In pause mode, touch the pause control to remove the pause state and restore it to the state before entering pause.
The pause will exit after 10 minutes, with close hob and hood.

 
6. Boost control

Activate the boost function

In heating mode,Touching the B button. Make sure the display shows boost animation or “b”.
Note: Hood displays “b” in boost mode, hob displays shows boost animation in boost mode.




- Max boost animation



Cancel the Boost function

Touching the heating zone slider control that you wish to cancel the boost function.

 Turn the whole cooktop off by touching the ON/OFF control.



- The cooking zone returns to its original setting after 5 minutes.
- The hood returns to its original setting after 5 minutes.
- If the original heat setting equals 0, it will return to max digital level after boost ends.

- When two burners on the same side are operating independently, if one burner is running on boost mode and the other burner is also switched to boost mode, the burner that enters boost mode later will remain in boost mode, while the other burner will switch to level 15.

7. Hood automatic


Automatically run the hood based on the status of induction.

In Hood automatic mode, after all cooking zones are turned off, the hood will be turned off 2 minutes later.


Cannot enter In Hood automatic mode without cooking zone enabled.

Hood automatic use

After pressing the power button to turn on the device, activate the cooking zone and set the gear, the system will automatically enter Hood automatic mode. the hood digital display shows A.

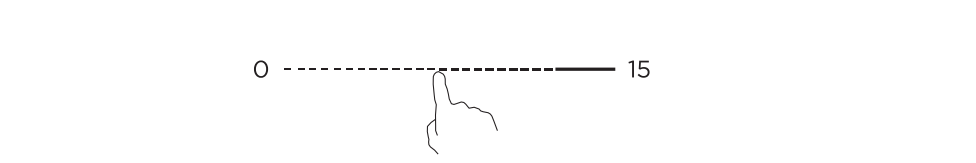

After entering Hood automatic mode, the Hood digital display shows A. When the Hood automatic button is pressed, the Hood gear is set to 0, and the range hood is turned off and exits Hood automatic mode.

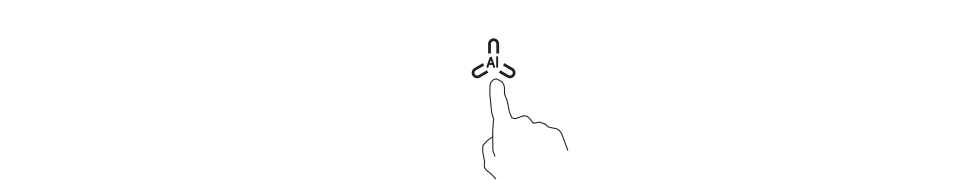

8. Cleaning Tips

After running both hood and induction for 80 hours, the indicator light will light up.



1. Check if the filter screen is dirty. If it is dirty, please follow the cleaning instructions in the filter screen cleaning section for cleaning.
2. Clean the water storage box according to the disassembly and assembly instructions.
3. After cleaning the water storage box, the indicator light will automatically turn off.



You can also reset the prompt time by long pressing the cleaning button for 3 seconds, and the cleaning timer will restart. If the indicator light is on, it will turn off.



NOTE

Excessive grease can affect the integrated extractor's suction performance, and water stored in the water collection box for too long may develop odors. Regular cleaning is recommended.

9. Default Working Times

Auto shut down is a safety protection function for your induction hob. It shut down automatically if ever you forget to turn off your cooking. The default working times for various power levels are shown in the below table:

Power level	1	2	3	4	5	6	7	8	9
Default working timer (hour)	8	8	8	6	6	6	4	4	4
Power level	10	11	12	13	14	15			
Default working timer (hour)	2	2	2	1.5	1.5	1.5			

Hood level	1	2	3	4	5	6	7	8	9
Default working timer (hour)	8	8	8	6	6	6	4	4	4
Hood level	10	11	12	13	14	15			
Default working timer (hour)	3	3	3	2	2	2			

Hood boost	Single hob boost
5min	5min

When the boost ends, it will exit to the gear before entering the boost, and when entering the front gear is 0, it will exit to the 15th gear after the boost ends
When the pot is removed, the induction hob can stop heating immediately and the hob automatically switch off after 1 minutes.

 People with a heart pace maker should consult with their doctor before using this unit.

10. User menu settings

The user menu function can be used to

C0: Restore factory settings

C3: Power limit setting

C5: Sound switch

C7: Digital tube brightness setting

H1: Hood circulation system mode Setting

H2: Hood Delay Closing Time Setting

H3: Reset the working time of the filter screen setting

Instructions for Entry Method

Menu item switch button (short press to activate): "LOCK"

Configuration parameter switch button (short press to activate): "BOOST"

Parameter save button (long press for 3 seconds): "LOCK"

Step 1: Press the power button to turn on the device while it is turned off;

Step 2: Long press the "LOCK" button for 3 seconds to enter the child lock state;

Step 3: Long press the "BOOST" button for 3 seconds to enter the menu configuration mode for confirmation, and automatically release the child lock. At this time, the Left Front digital display shows "c";

Step 4: Short press the "BOOST" button to enter the menu configuration mode. The LF digital display will show the current menu number (e.g. c3), and the timer digital display will show the value corresponding to the current menu number (e.g. 1); (Pressing other buttons in this step will automatically exit)

Step 5: Short press the "LOCK" button to switch menu numbers (e.g. c3->c5->c7...);

Step 6: Short press the "BOOST" button to switch the value corresponding to the current menu number (e.g. 0->1);

Step 7: Long press the "LOCK" button for 3 seconds to save all modified menu parameters and exit menu mode;

NOTE

- The first to third steps must be completed within 15 seconds, otherwise it needs to be shut down and restarted to enter the menu configuration mode.
- After entering the user menu settings mode, if no valid keys are pressed within 30 seconds, the Hob will automatically exit the mode and shut down, without saving the current settings.

Channel number	Configuration Content	Configuration Options Description
c0	Restore factory settings	0 : not recover- default 1: recover Default:0
c3	Power limit setting	2.8/3.5/4.5/5.8/7.4kw Default:7.4kw
c5	Sound switch	0 : Sound activated 1: sound turning off Default:0
c7	Digital tube brightness setting	1-5: brightness level Default:3

Channel number	Configuration Content	Configuration Options Description
h1	Hood circulation system mode Setting	0- Reserved - Not Used 1: Internal circulation 2: External circulation Default:2
h2	Hood Delay Closing Time Setting	0 : off 1: 1min 2: 2 min 5: 5 min 10: 10 min 20 : 20 min Default:0
h3	Reset the working time of the filter screen setting	0 : not recover 1: recover Default:0

Hood Delay Closing Instructions:

After setting the automatic shutdown time, if the range hood and stove run simultaneously for more than 30 seconds, the automatic shutdown logic of the range hood will be triggered. At this time, press the power button to turn off the machine, and the range hood will run in gear 1 for the set time;

CLEANING AND MAINTENANCE

To keep your appliance working efficiently for a longtime, it is important to clean and maintain it carefully.

Cleaning the Hob

What?	How?	Important!
Everyday soiling on glass. (fingerprints, marks, stains left by food or non-sugary spillovers on the glass)	<ol style="list-style-type: none">1. Switch the power to the cooktop off.2. Apply a cooktop cleaner while the glass is still warm (but not hot!)3. Rinse and wipe dry with a clean cloth or paper towel.4. Switch the power to the cooktop back on.	<ul style="list-style-type: none">• When the power to the cooktop is switched off, there will be no 'hot surface' indication but the cooking zone may still be hot! Take extreme care.• Heavy-duty scourers, some nylon scourers and harsh/abrasive cleaning agents may scratch the glass. Always read the label to check if your cleaner or scourer is suitable.• Never leave cleaning residue on the cooktop: the glass may become stained.
Boilovers, melts, and hot sugary spills on the glass.	<p>Remove these immediately with a fish slice, palette knife or razor blade scraper suitable for Ceramic glass cooktops, but beware of hot cooking zone surfaces:</p> <ol style="list-style-type: none">1. Switch the power to the cooktop off at the wall.2. Hold the blade or utensil at a 30° angle and scrape the soiling or spill to a cool area of the cooktop.3. Clean the soiling or spill up with a dish cloth or paper towel.4. Follow steps 2 to 4 for 'Everyday soiling on glass' above.	<ul style="list-style-type: none">• Remove stains left by melts and sugary food or spillovers as soon as possible. If left to cool on the glass, they may be difficult to remove or even permanently damage the glass surface.• Cut hazard: when the safety cover is retracted, the blade in a scraper is razor-sharp. Use with extreme care and always store safely and out of reach of children.
Spillovers on the touch controls.	<ol style="list-style-type: none">1. Switch the power to the cooktop off.2. Soak up the spill.3. Wipe the touch control area with a clean damp sponge or cloth.4. Wipe the area completely dry. with a paper towel.5. Switch the power to the cooktop back on.	<ul style="list-style-type: none">• The cooktop may beep and turn itself off, and the touch controls may not function while there is liquid on them. Make sure you wipe the touch control area dry before turning the cooktop back on.

Cleaning The Grille, Grease Filter, Activated Carbon Filter

The grease filters filter the grease from the cooking vapour. To keep it in good working order, you must clean the grease filter regularly.

 **WARNING...Risk of fire!**

Fatty deposits in the grease filters may catch fire.


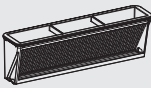
- Never operate the appliance without a grease filter.
- Clean the grease filters regularly.
- Never work with naked flames close to the appliance (e.g. flambéing).
- Do not install the appliance near a solid fuel heating appliance (e.g. wood- or coal-burning) unless The heating appliance has a sealed, non-removable cover. There must be no flying sparks.

1. ATTENTION


Falling grease filters may damage the hob below. (It is recommended to clear the grease filter every 7 days)

Remove the grille and the grease filter, and dispose of them properly.

- Grease may accumulate in the bottom of the container. Hold the grease filter level to prevent grease from dripping out.

Code	Accessories	Description	Quantity
C		Grille	1
D		Grease Filter	1

Take out the grid and grease filter from top to bottom

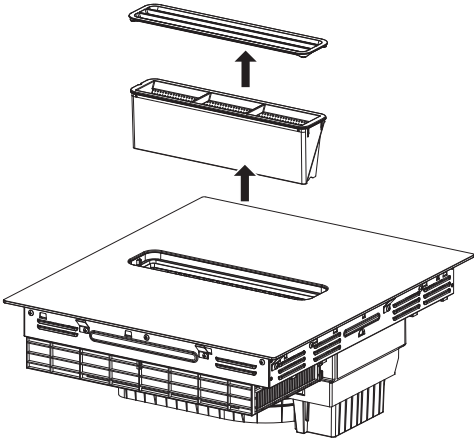


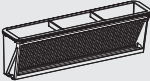

Cleaning the grease filters or grille manually

1. Soak the grease filter or grille in hot soapy water.
2. Use a brush to clean the grease filter or grille.
Do not use aggressive, acidic or alkaline cleaning products.
Use special grease solvent for stubborn dirt.
3. Rinse the grease filters thoroughly.
4. Allow the grease filters to drain.


Cleaning the grease filter in the dishwasher

- 1. Place the grease filters loosely in the dishwasher and do not jam it in.
For optimum cleaning results, lay the grease filter on the filter side in the dishwasher.
Do not clean heavily soiled grease filters with utensils.
Do not use aggressive, acidic or alkaline cleaning products.
- 2. Start the dishwasher, Select a temperature of no more than 70.°C.
- 3. Allow the grease filters to drain.


Cleaning The Activated Carbon Filter

Code	Accessories	Description	Quantity
C		Grille	1
D		Grease Filter	1
G		Activated Carbon Filter	2

Take out the grid, grease filter and activated carbon filter one by one from top to bottom

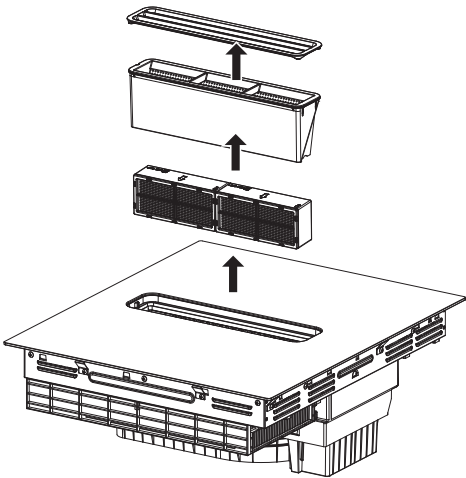

Pull out the activated carbon filter by hand using the metal ring and lift it upwards.

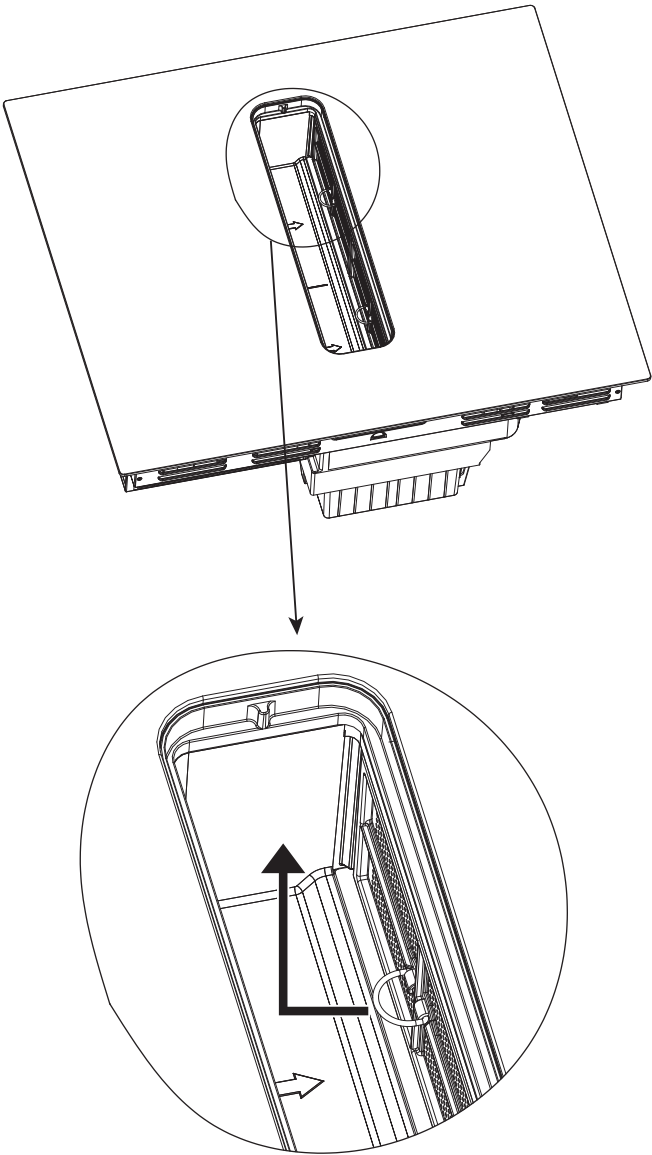

Cleaning and replacement

- 1. Place the activated carbon filter in the dishwasher, add detergent, and use the standard mode (1.5h~3h) to clean.
- 2. Soak the activated carbon filter in hot water (60-80°C) for 1-2 hours, add detergent to the hot water, and rinse with clean water after soaking.
- 3. To maintain the good working condition of the activated carbon filter, please clean it regularly; replace it promptly when its lifespan expires after 5 years of use.
- 4. You can obtain activated carbon filter from specialist retailers or customer service.
- 5. Refer to the installation manual for installation of the activated carbon filter.

Drying

- 1. Place the cleaned activated carbon block in the oven and bake for 3 hours (150°C).
- 2. Use a warm air blower to dry it for 0.5 hours.


NOTE

- 1. Do not use highly alkaline or heavy oil-based detergents (we recommend using dishwashing tablets/powders from Finish, Somat, or Ecover), as they may cause damage to the activated carbon filter.
- 2. The temperature of the hot water should not exceed 80°C, as this may cause damage to the activated carbon filter.
- 3. Do not exceed a baking temperature of 200°C, as this may cause damage to the activated carbon filter.
- 4. Do not use external force to scrub the activated carbon block, as this may cause damage to the activated carbon filter.

Cleaning The Water Storage Tank

Code	Accessories	Description	Quantity
H		Water Storage Tank	1


Press the buckles on the water storage tank with both hands and pull it down.

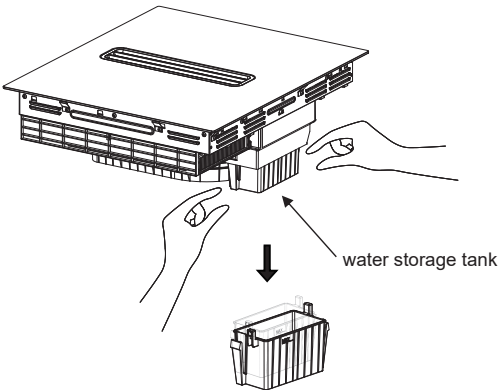


Cleaning

Rinse the water storage tank with warm water. If there are oil stains, you can add a cleaning agent to assist in cleaning.

Installation of water storage tank

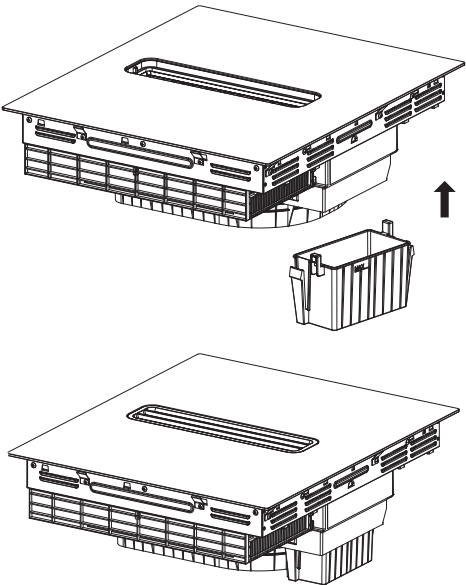

Make sure the buckle of the water tank is properly installed

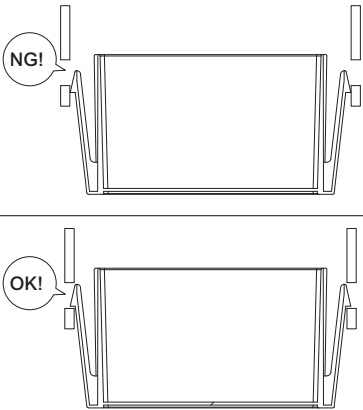

TROUBLESHOOTING

 
Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the tables carefully below in order to save your time and money that may cost for calling to the service center.

Failure Display and Inspection

The induction hob is equipped with a self diagnostic function. With this test the technician is able to check the function of several components without disassembling or dismantling the hob from the working surface.

Troubleshooting

1) Failure code occur during customer using & Solution;

Failure code	Problem	Solution
Auto-Recovery		
EL,EH	Supply voltage is abnormal.	Please inspect whether power supply is normal. Power on after the power supply is normal.
C1	High temperature of ceramic plate sensor.	Wait for the temperature of ceramic plate return to normal. Touch "ON/OFF" button to restart unit.
C2	High temperature of IGBT.	Wait for the temperature of IGBT return to normal. Touch "ON/OFF" button to restart unit. Check whether the fan runs smoothly; if not , replace the fan.
b2	High temperature of IPM.	Wait for the temperature of IPM return to normal. Touch "ON/OFF" button to restart unit.
b3	The current of the hood driver board is abnormal.	Touch "ON/OFF" button to restart unit.
	The water storage tank has been removed.	Check if the water tank is properly installed.
EF	Multiple function key are pressed at the same time.	Clean the operation panel.
FC	Filter replacement tips.	hood and induction are used together for approximately 750 hours before it is recommended to replace the activated carbon filter. Please replace the carbon filter, refer to the carbon filter replacement guide. After the replacement is completed, please follow the user menu instructions to enter h3 for recovery operation.

Failure code	Problem	Solution
No Auto-Recovery		
E2	Ceramic plate temperature sensor failure- short circuit.	Check the connection or replace the ceramic plate temperature sensor.
E1	Ceramic plate temperature sensor failure-open circuit.	
E7	Ceramic plate temperature sensor failure—invalid.	
E4	Temperature sensor of the IGBT failure - short circuit.	Replace the inverter driver board.
E3	Temperature sensor of the IGBT failure - open circuit.	
b5/b7	Ventilation system error or Ventilation system air duct fully blocked.	Touch "ON/OFF" button to restart unit. Check whether there are foreign objects inside the smoker. Check whether the connecting cable is damaged. Replace the hood driver board or motor.
bd	The communication between the display board and the hood driver board fails.	Replace the hood driver, power board, or display board, and check whether the connecting cable is damaged.
EU	The connection between the display board and the main board is fail or touch IC communication fail.	Replace the inverter driver board, power board, or display board, and check whether the connecting cable is damaged.

Specific Failure & Solution

Failure	Problem	Solution A	Solution B
The LED does not come on when unit is plugged in.	No power supplied.	Check to see if plug is secured tightly in outlet and that outlet is working.	
	The accessory power board and the display board connected failure.	Check the connection.	
	The accessory power board is damaged.	Replace the accessory power board.	
	The display board is damaged.	Replace the display board.	
Some buttons can't work, or the LED display is not normal.	The display board is damaged.	Replace the display board.	
The Cooking Mode Indicator comes on, but heating does not start.	High temperature of the hob.	Ambient temperature may be too high. Air Intake or Air Vent may be blocked.	
	There is something wrong with the fan.	Check whether the fan runs smoothly ; if not , replace the fan.	
	The power board is damaged.	Replace the power board.	
Heating stops suddenly during operation and the display flashes " <u>u</u> ".	Pan Type is wrong.	Use the proper pot (refer to the instruction manual.)	Pan detection circuit is damaged, replace the power board.
	Pot diameter is too small.		
	Cooker has over heated;	Unit is overheated. Wait for temperature to return to normal. Push "ON/OFF" button to restart unit.	
Heating zones of the same side (Such as the first and the second zone) would display " <u>u</u> ".	The power board and the display board connected failure;	Check the connection.	
	The display board of communicate part is damaged.	Replace the display board.	
	The Main board is damaged.	Replace the power board.	
Fan motor sounds abnormal.	The fan motor is damaged.	Replace the fan.	

The above are the judgment and inspection of common failures.

Please do not disassemble the unit by yourself to avoid any dangers and damages to the induction hob.






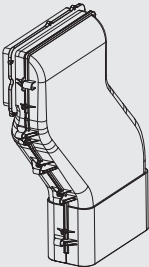
PRODUCT INSTALLATION


Before Installing the Hob, Make Sure That

- The work surface is square and level, and no structural members interfere with space requirements.
- The work surface is made of a heat-resistant and insulated material.
- If the hob is installed above an oven, the oven has a built-in cooling fan.
- The installation will comply with all clearance requirements and applicable standards and regulations.
- Because this product is quite large, it's necessary for two technicians to work together during installation to ensure it's completed properly.
- Please register the warranty for this product on www.cookology.com

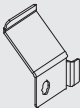




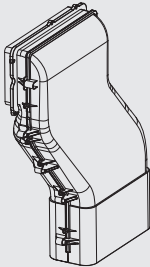
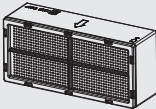


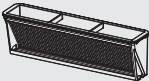
Installation Accessories, Air Extraction Mode

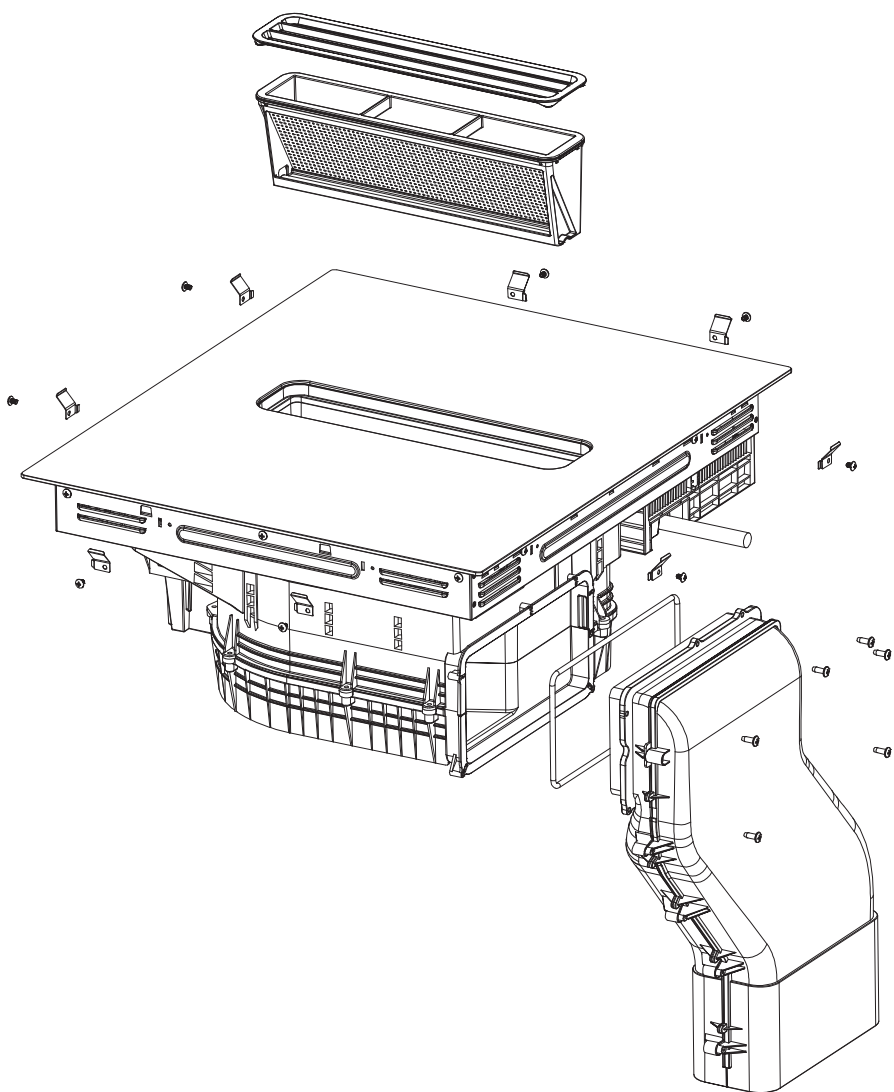Code	Accessories	Description	Quantity
A		Bracket	8
B		3.9 *6 Screw	8
C		Grille	1
D		Grease Filter	1
E		3.5 *14 Screw	6
F		Exhaust system	1

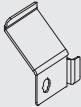


Installation Accessories, Air Recirculation Mode

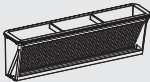Code	Accessories	Description	Quantity
A		Bracket	8
B		3.9 *6 Screw	8
C		Grille	1
D		Grease Filter	1
E		3.5 *14 Screw	6
F		Hanging Plate Fitting	1
G		Activated Carbon Filter	2

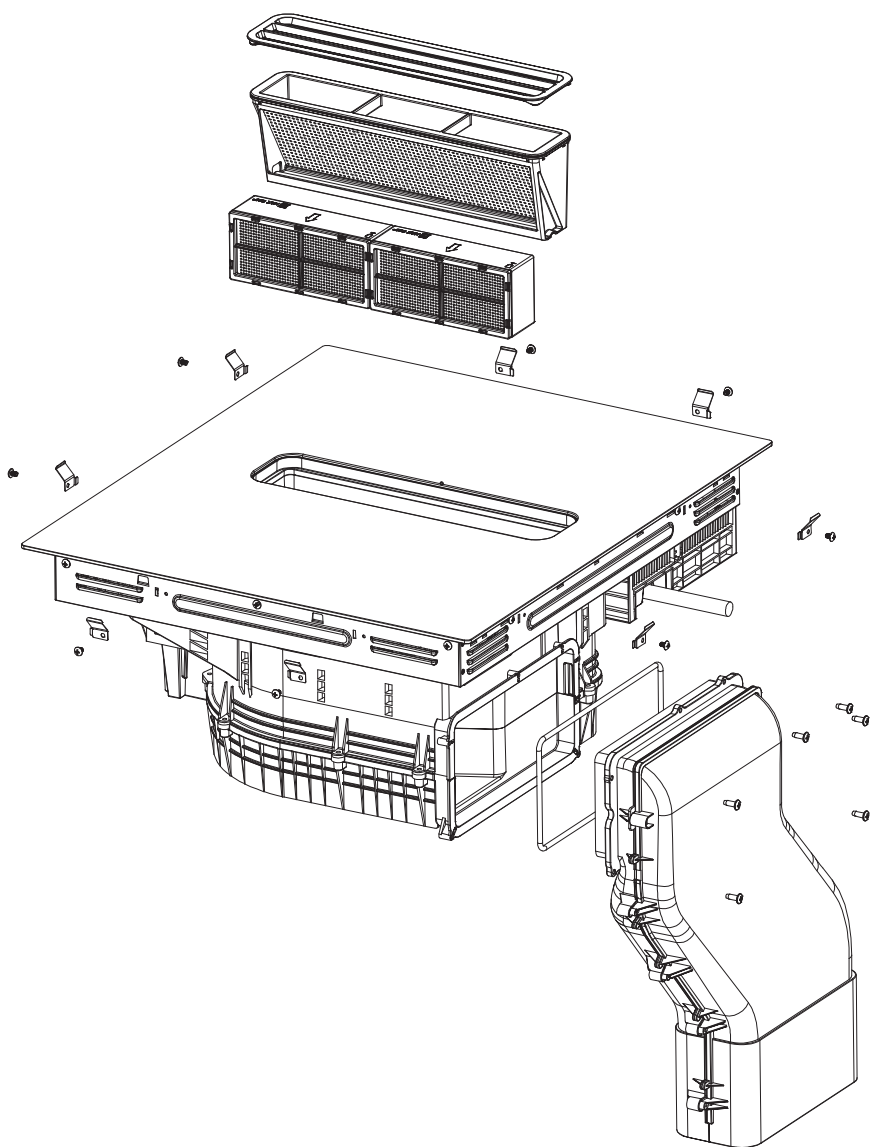


Installation Dimension Requirements


Unit: mm

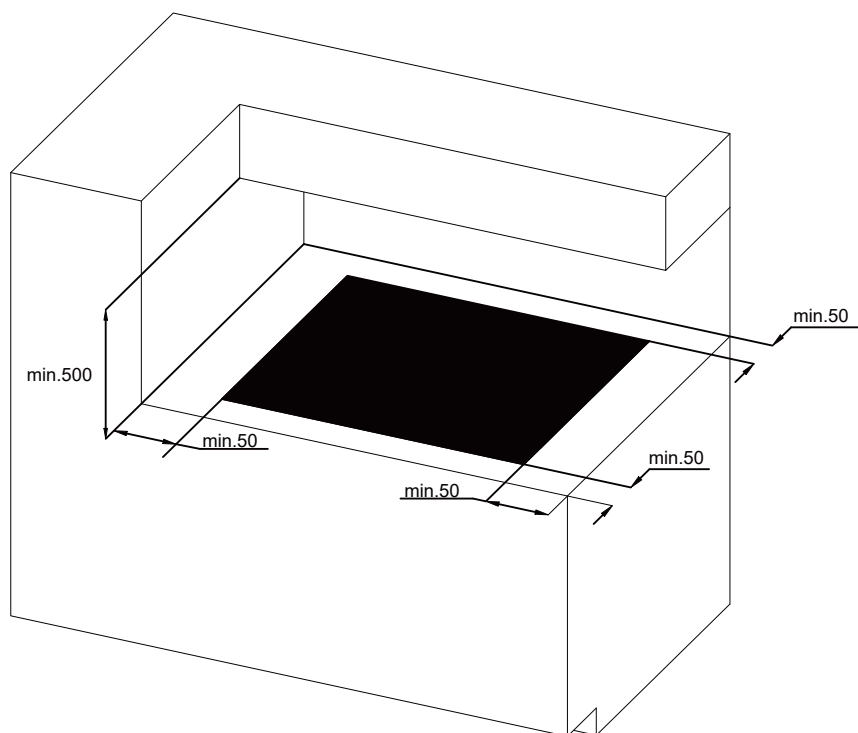



Normal Installation Instruction

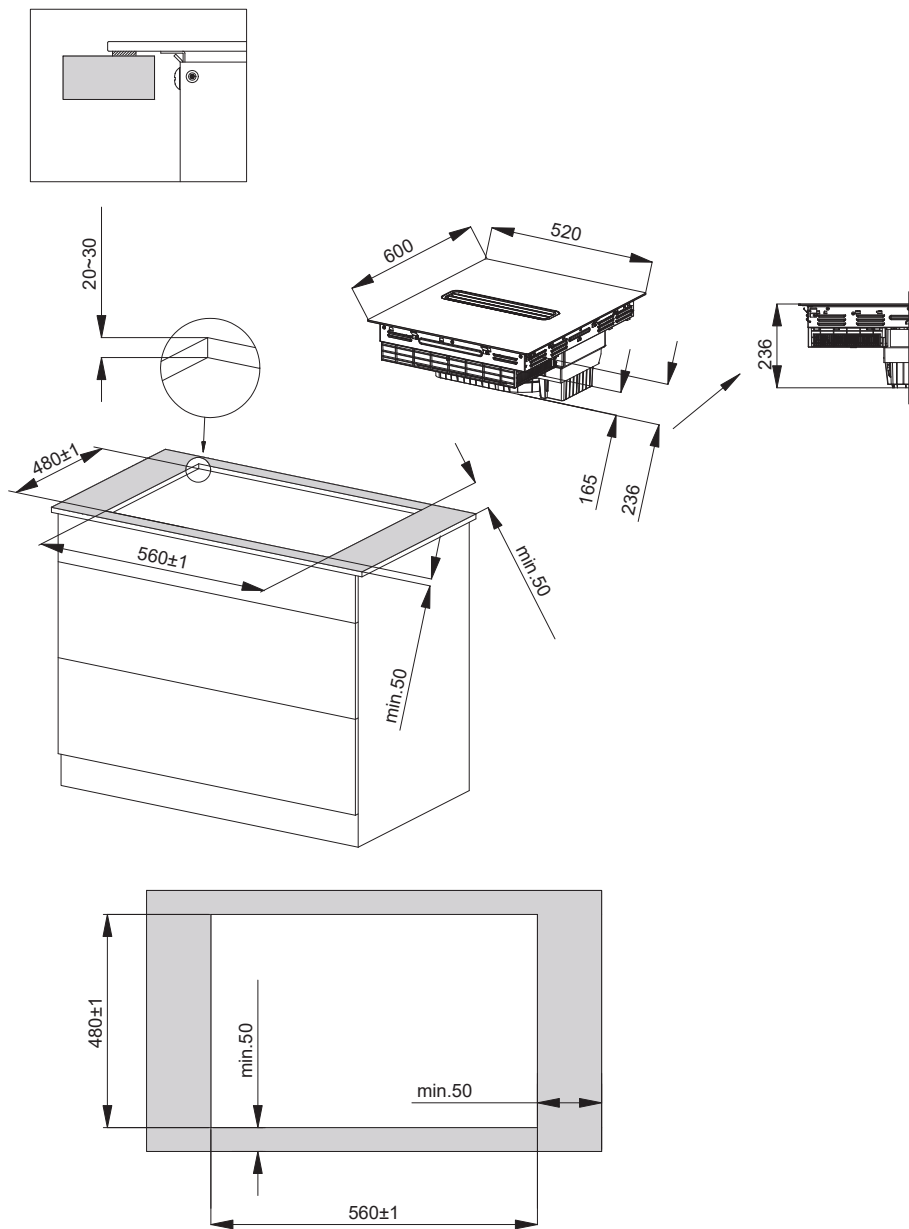

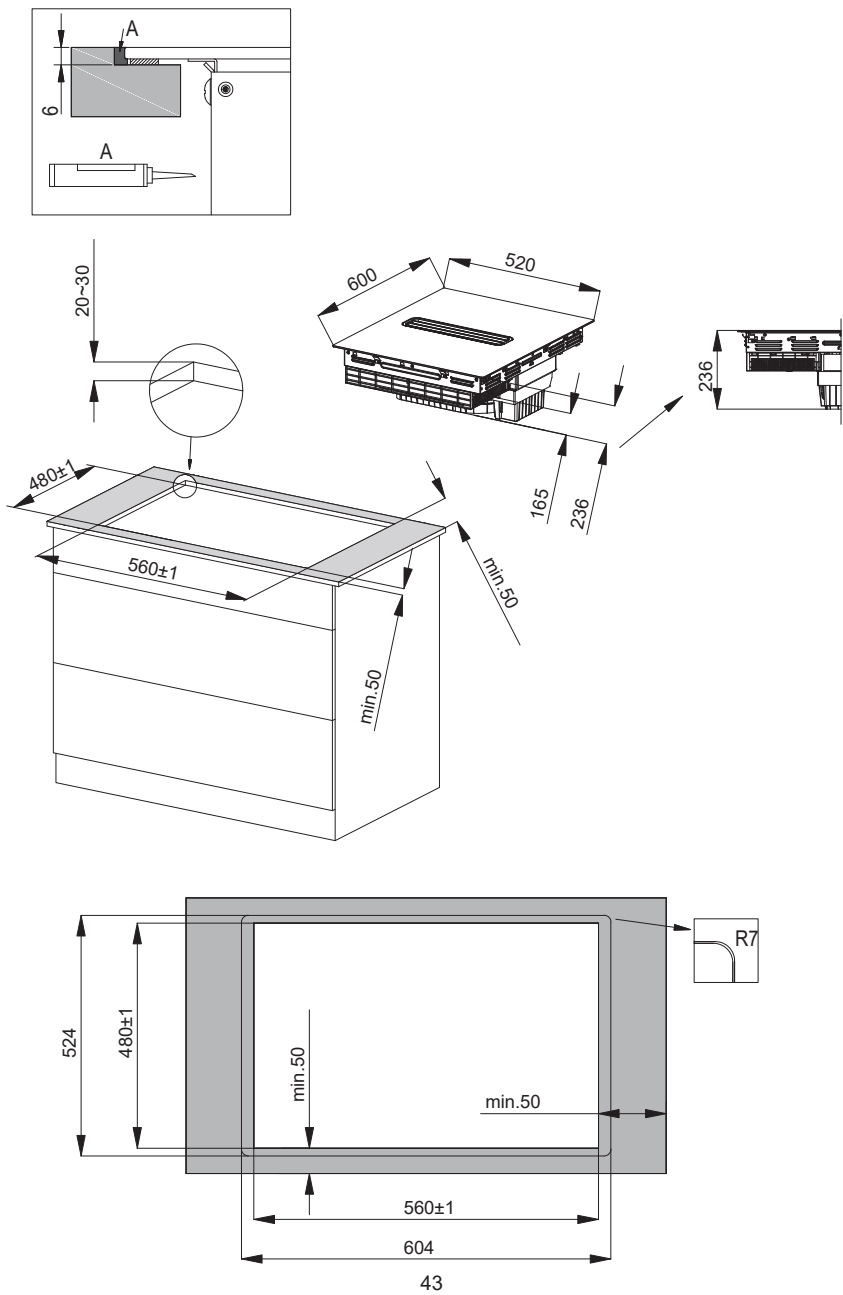

Flush-fitting Installation Instruction

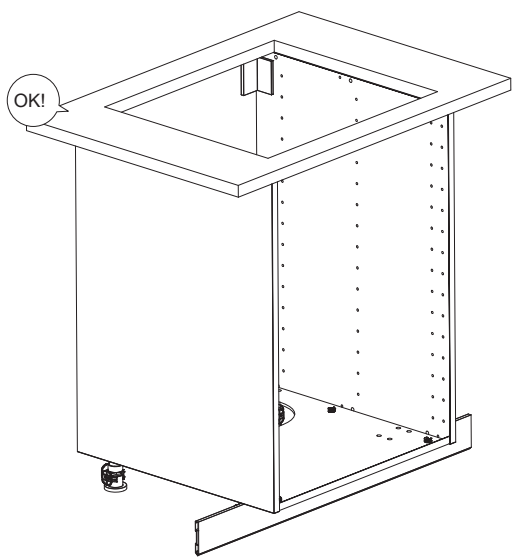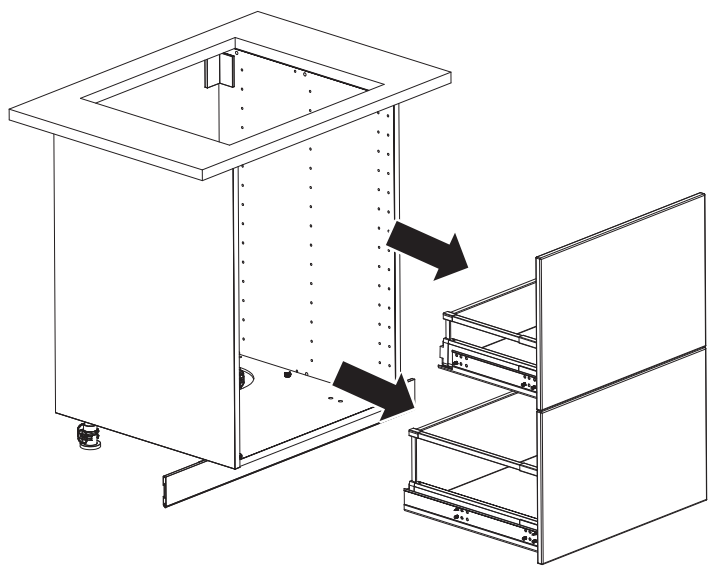


Remove Drawers Before Installing Appliance


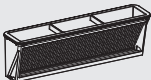



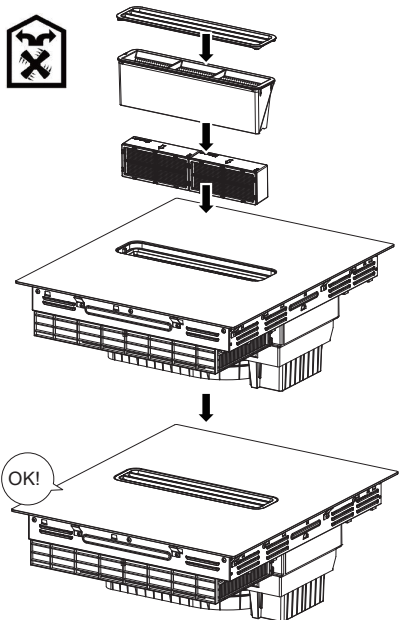
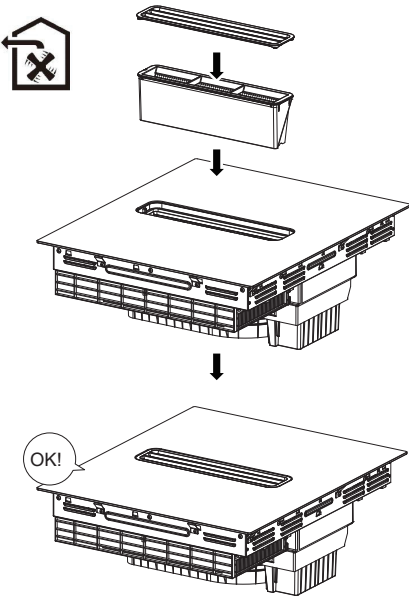
Install Brackets On The Hobs

Code	Accessories	Description	Quantity
A		Bracket	8
B		3.9 *6 Screw	8



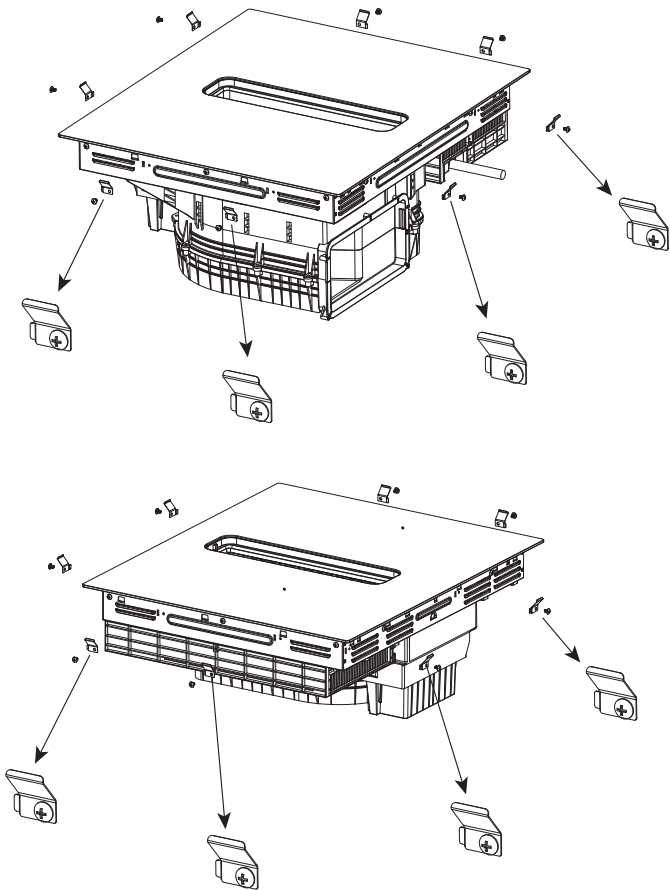


Air Extraction Mode & Air Recirculation Mode



Code	Accessories	Description	Quantity
C		Grille	1
D		Grease Filter	1
G		Activated Carbon Filter Used in Air Recirculation Mode	2



 
Open the air outlet in the house.
(usually windows or exhaust fan)

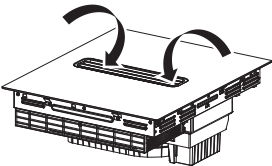
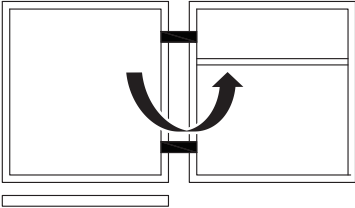


If air outlet is closed, Do not use the product.

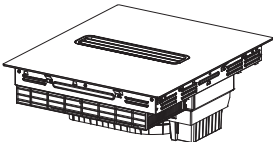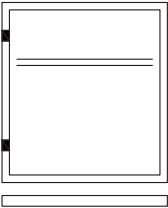



The activated carbon filter is installed in the bottom right corner of the machine.

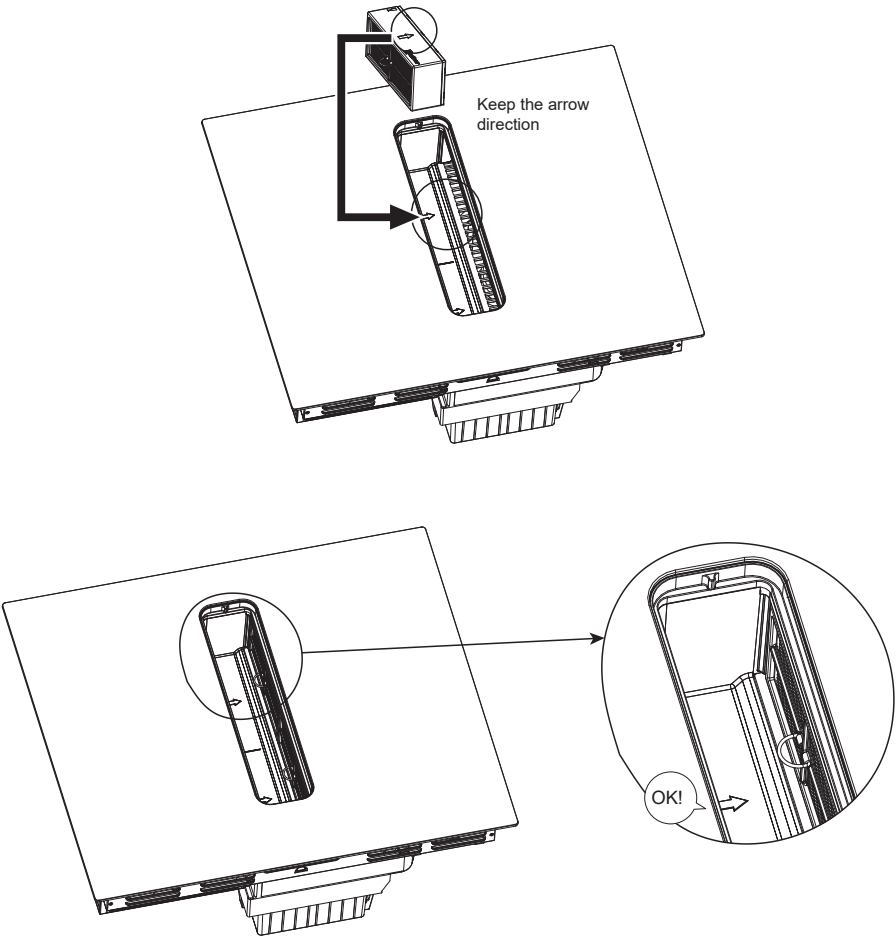

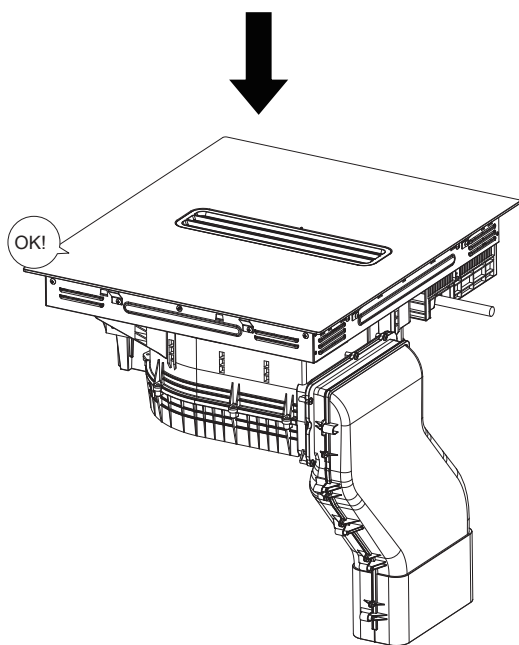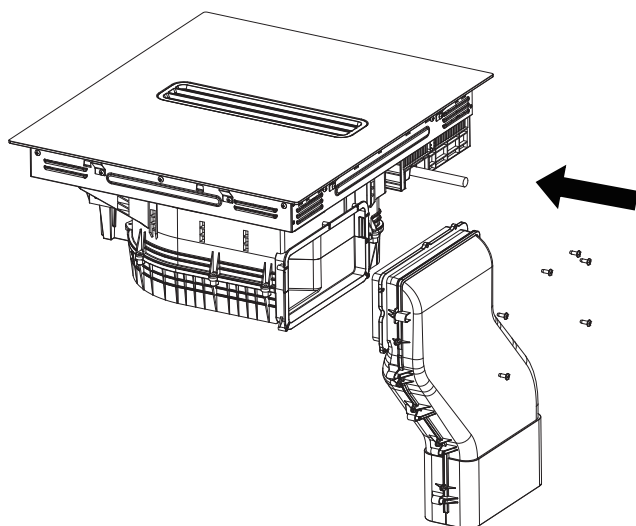

Tilt downwards and embed

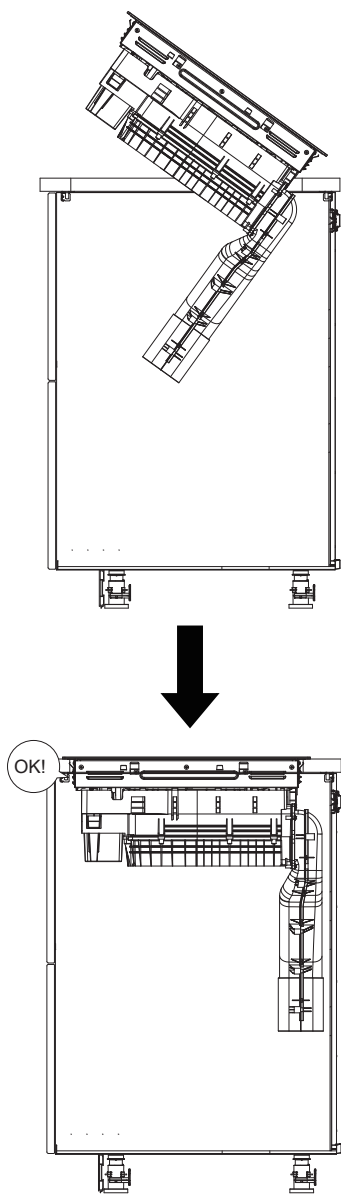

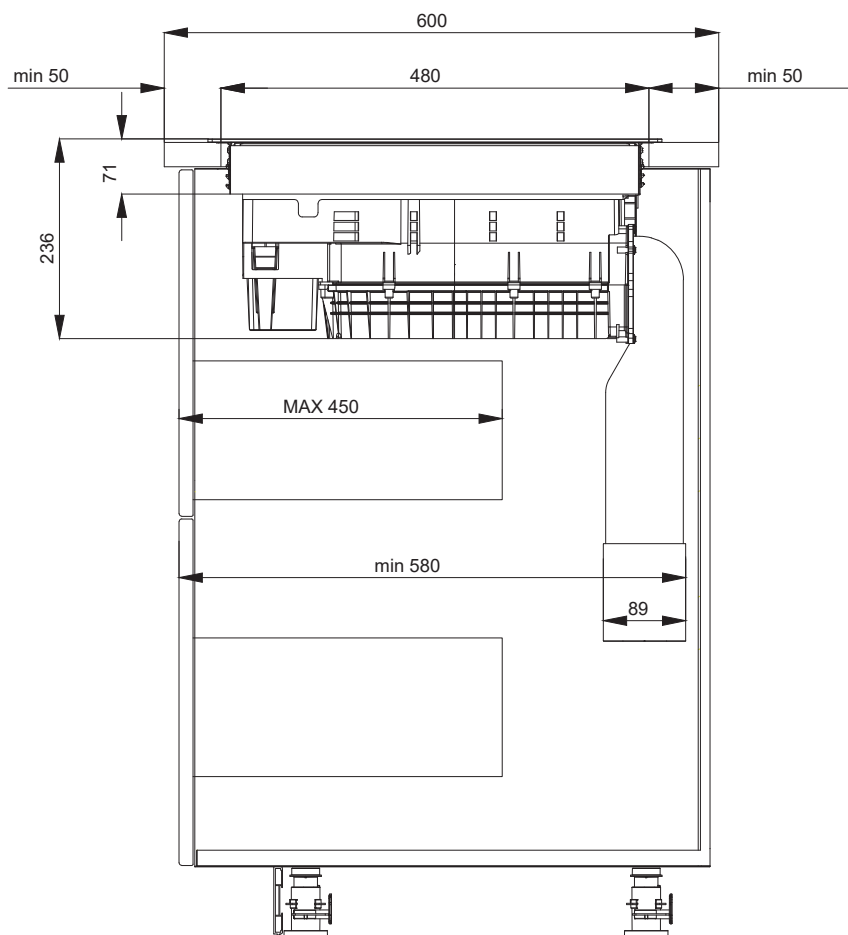

After Installing the Hob, Make Sure That

- The power supply cable is not accessible through cupboard doors or drawers.
- There is adequate flow of fresh air from outside the cabinetry to the base of the hob.
- If the hob is installed above a drawer or cupboard space, a thermal protection barrier is installed below the base of the hob.
- The isolating switch is easily accessible by the customer.

CAUTIONS

1. The induction hotplate must be installed by qualified personnel or technicians. We have professionals at your service. Please never conduct the operation by yourself.
2. The hob will not be installed directly above a dishwasher, fridge, freezer, washing machine or clothes dryer, as the humidity may damage the hob electronics
3. The induction hotplate shall be installed such that better heat radiation can be ensured to enhance its reliability.
4. The wall and induced heating zone above the table surface shall withstand heat.
5. To avoid any damage, the sandwich layer and adhesive must be resistant to heat.
6. A steam cleaner is not to be used.

Connecting the Hob to the Mains Power Supply

This hob must be connected to the mains power supply only by a suitably qualified person.

Before connecting the hob to the mains power supply, check that:

1. The domestic wiring system is suitable for the power drawn by the hob.
2. The voltage corresponds to the value given in the rating plate
3. The power supply cable sections can withstand the load specified on the rating plate.



To connect the hob to the mains power supply, do not use adapters, reducers, or branching devices, as they can cause overheating and fire.



The power supply cable must not touch any hot parts and must be positioned so that its temperature will not exceed 75°C at any point.

Check with an electrician whether the domestic wiring system is suitable without alterations.

Any alterations must only be made by a qualified electrician.

- If the cable is damaged or to be replaced, the operation must be carried out by the after-sale agent with dedicated tools to avoid any accidents.
- If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.
- The installer must ensure that the correct electrical connection has been made and that it is compliant with safety regulations.
- The cable must not be bent or compressed.
- The cable must be checked regularly and replaced by authorised technicians only.

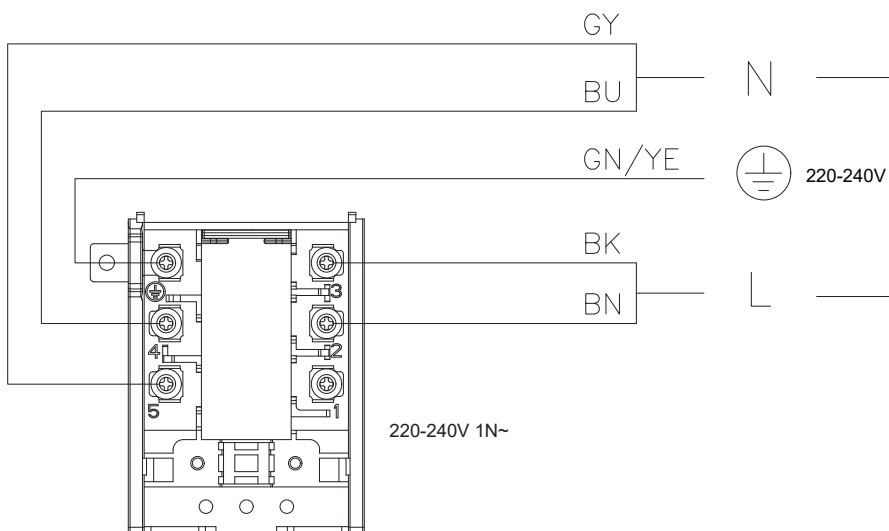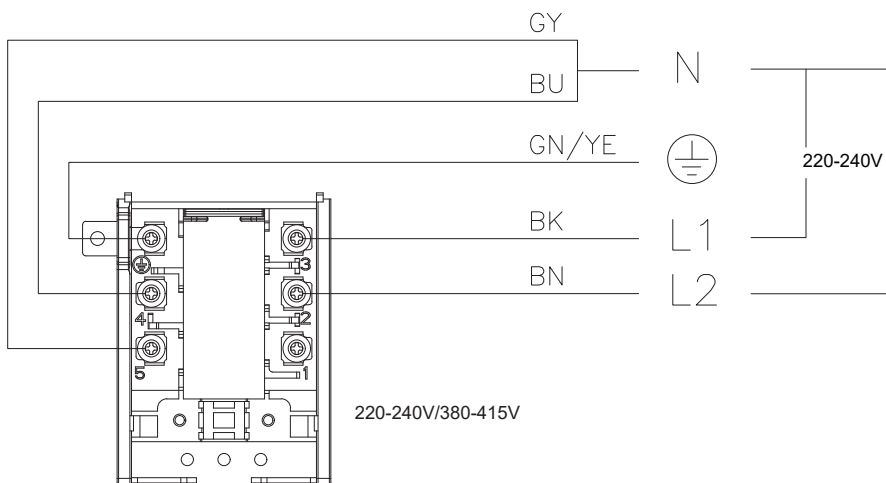

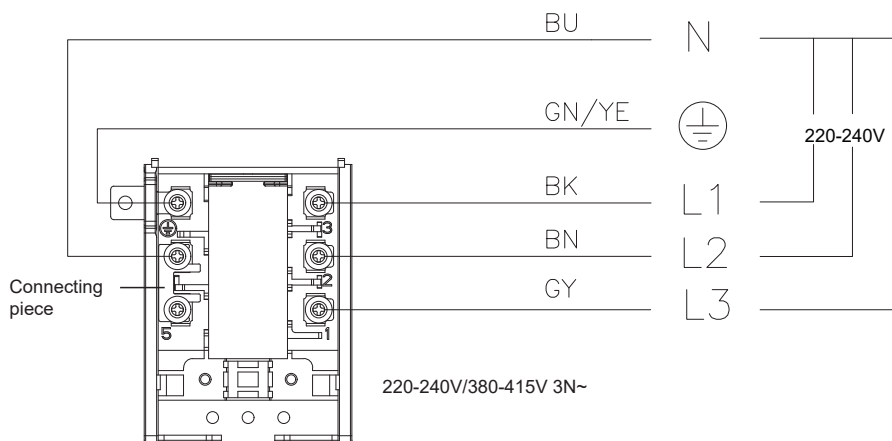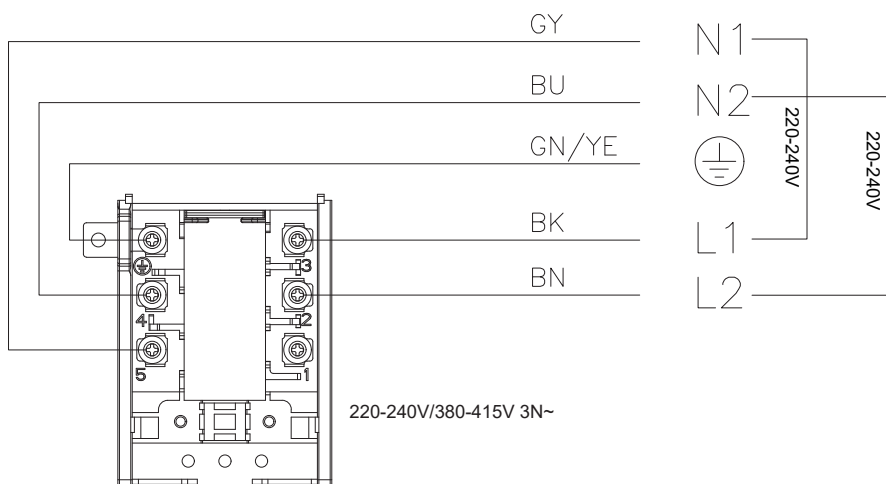

DISPOSAL AND RECYCLING

Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

The symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.

According to Waste of Electrical and Electronic Equipment(WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.



Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations.

Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area. Further information are provided on request.

COOKOLOGY

CIDDEVN600

7 Meadow Business Park Piperell Way Haverhill Suffolk CB9 8QX
Cookology is a trading name of The Wright Buy Ltd