
COOKOLOGY

SPIN DRYER

Capacity: 4kg

CSPD4WH
CSPD4BK

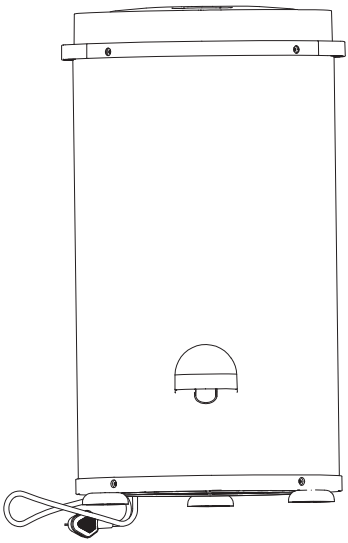

- Read the instruction manual carefully before use.
- The product is based on the actual product.
- Keep the instruction manual properly for future reference.

Contents

User Guide 1

Notice 1-2

Functions and buttons 2

Product structure and component names 2

Diagram 3

Technical parameter 3

Spin drying instructions 4

User Guide

Attention: When spin drying, the clothes must be placed flat and flattened with a spin press plate to prevent unevenness. If you find any collision with the drum or slow rotation during the spin drying process, please stop the machine and take out the clothes and flatten them, or take out some of the clothes before spin drying.

Notice


1.This product should not be installed in bathrooms, places with wind and rain infiltration, or places with high humidity.
2.Use a separate socket and do not use the same socket with other electrical appliances to avoid heating and causing fires.
3.When the power cord and plug are damaged or the socket is loose, please do not use them, otherwise there is a risk of electric shock or fire.
4.If there is dust or debris adhering to the plug blades and surroundings of the power plug, please wipe them clean to avoid causing a fire.
5.When plugging or unplugging the power plug, do not pull the wires to remove the plug, otherwise there is a risk of electric shock or short circuit.
6.After each use, long-term disuse, and during product maintenance, the power plug must be unplugged. Additionally, do not plug or unplug with wet hands to avoid electric shock.
7.Do not use the spin dryer unattended.
8.If the power cord is damaged, it must be replaced by a designated service provider to avoid danger.
9.Do not approach heat sources such as heaters and avoid direct sunlight to prevent plastic parts from deforming or discoloring.
10.Do not place hot or heavy items on the spin dryer to avoid plastic deformation or component damage.
11.During maintenance, all components inside the body must not come into contact with water.
12.Do not put your hands into the spin drying drum until it has completely stopped.
   a. If the stainless steel drum does not stop rotating within 15 seconds after opening the dehydration cover, it should be stopped from use and repair requested
   b. When spin drying, the pressure cover should be used correctly to prevent washing fabrics from flying out of the spin drying drum.
13.Do not block the air vent with the carpet.
14.This product is not suitable for young children or people with disabilities to use unless guided by a guardian to ensure their safe use.

Notice


15.When spin drying is completed and needs to be refilled, please refill the water before spin drying. Do not spin dry while refilling, otherwise it may cause water to flow down from the water inlet and splash onto electrified parts, posing a danger and damaging the spin dryer.
16.Do not let children play with electrical appliances. Cleaning and user maintenance should be carried out under adult supervision and should not be operated independently by children.

Functions and buttons

Plug in the 220V AC power supply, place the clothes flat in the drum, put the spin press plate onto the clothes and close the inner door, then turn the knob clockwise. Set an appropriate spin drying time, close the top lid, and start the spin drying process. To end the spin drying process, simply open the top lid.

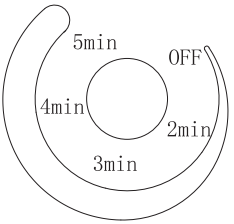


Product structure and component names

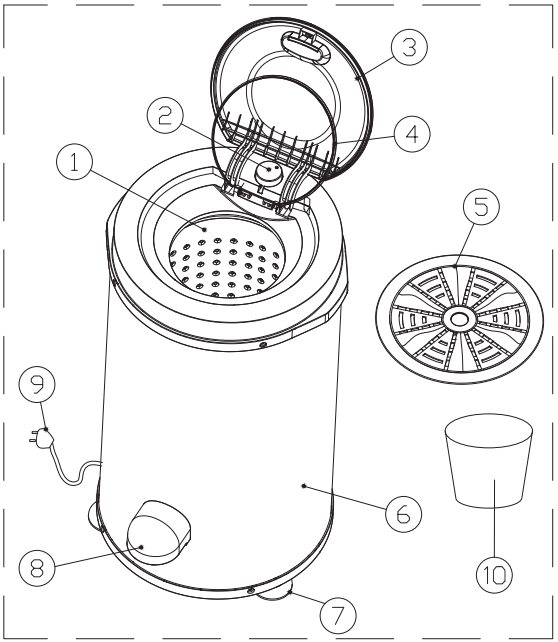

No.	Name
1	Stainless steel drum
2	Timer
3	Top lid
4	Inner door
5	Spin press plate
6	Outer drum
7	Foot pad
8	Water outlet
9	Power cord
10	Water collection pot

DIAGRAM

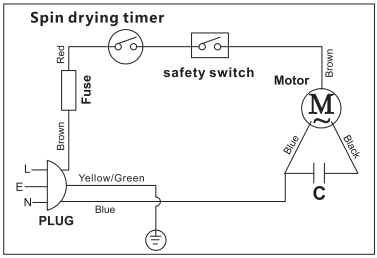

Technical parameter

Technical parameter / Model number / Nmae	CSPD4WH CSPD4BK
Product dimension	370mm*420mm*650mm
Packaging dimension	420mm*420mm*700mm
Product weight	12kg
Power of spin drying	260W
Rated voltage	220V
Rated frequency	50Hz
Rated spin drying capacity	4.0kg
Spin drying speed	2800r/min
Open mode	Top opening type
Control mode	Mechanical (1-5 minute timer)
Drainage mode	Automatic drum external drainage
Outer drum material	Galvanized
Inner drum material	Stainless steel

Spin drying instructions

1.For large items such as bed sheets and towels, please place them evenly at the bottom of the spin drying drum and press them tightly, otherwise it will cause significant vibration and affect the spin drying effect.

2.Spin drying:

①Place the clothes pressing board upright and press it tightly, otherwise the washings will bounce and accidents may occur;

②Cover the top lid of the stainless steel drum and ensure it is completely closed;

③Determine the spin drying time based on the amount of washings;

④When there is a "clicking" vibration sound during spin drying, it indicates that the washings has not been evenly placed. Please open the stainless steel drum cover and re-place the washings evenly, press the spin press plate, and then proceed with spin drying.

⑤During spin drying, when you open the outer cover of the stainless steel drum, it stops rotating. Please close the outer cover of the stainless steel drum and start rotating again.