
2.

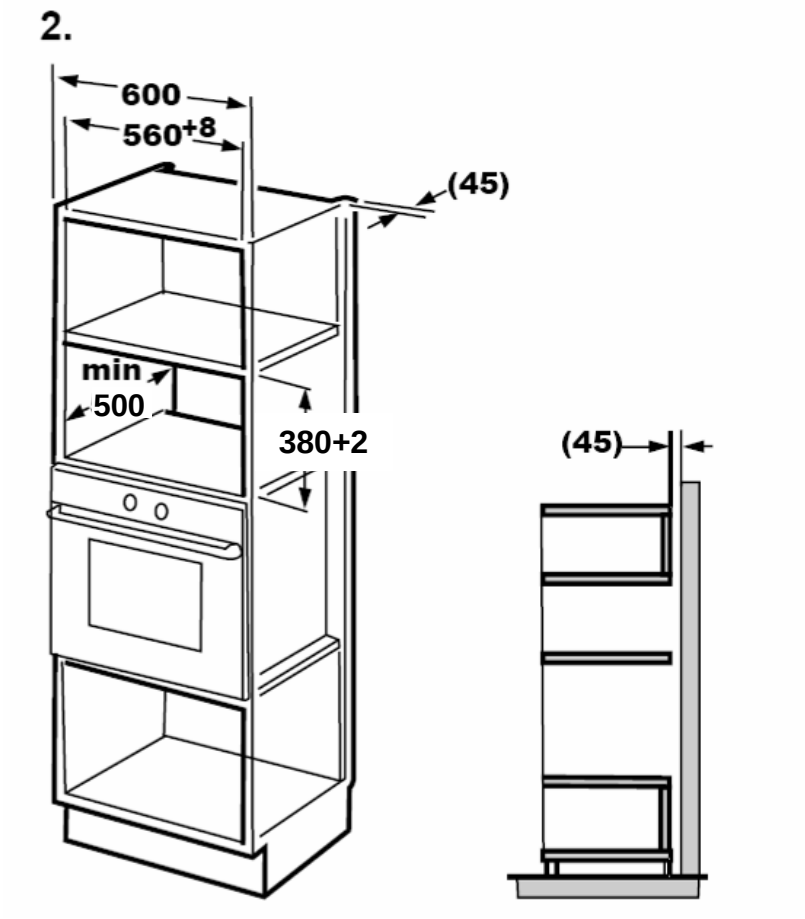

Note:

The bracket and bottom caninet template are needed when installating in both installations.